

GUESTS: This fireplace is on a propane bottle system. It is intended for your enjoyment while in the living room space. We ask that you refrain from leaving the fireplace on for extended periods or while not in the living room.

⚠ WARNING:
FIRE OR EXPLOSION HAZARD
Failure to follow safety warnings exactly could result in serious injury, death, or property damage.

Do not store flammable vapors and liquids in the vicinity of this appliance.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Leave the building immediately.
- Close valve in fireplace or at propane tank.
- Call Elite Accommodations or the fire department.


⚠ WARNING: Extremely Hot!
Heat and flammability



Hot glass will cause burns.
Do not touch glass until cooled.
Never allow children to touch glass.

This unit operates with a pilot light flame. The fireplace will not operate if pilot flame is out. See pilot flame location in image.

If no pilot flame is visible - do not try to light it yourself. Contact Elite Accommodations.

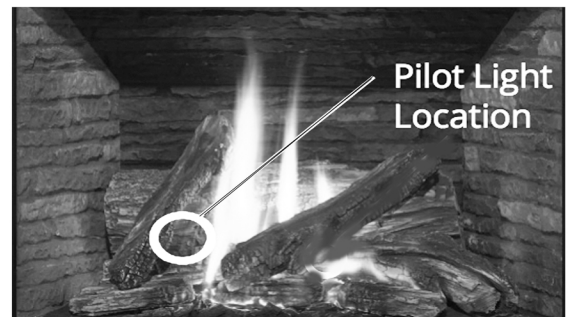

To Turn Fireplace Flame ON

Simply press and hold up button ▲ (in diagram). If the fire does not start after 5 seconds. Stop and check for pilot light. If no pilot light present, contact Elite accommodations.

To Adjust Flame level


To adjust flame press the up ▲ or down ▼ button.

To Turn Fireplace OFF


Press the down ▼ button until flame goes out.

Other Functions:

Please do not use AUTO or TIMER Functions

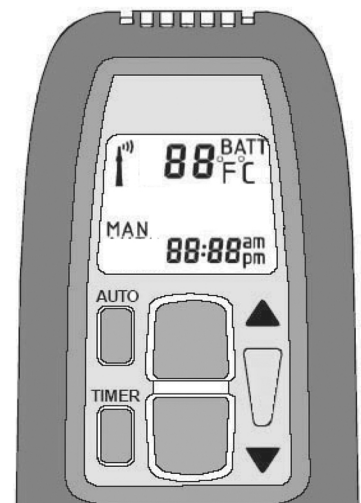

Troubleshooting: If there is a visible pilot flame but main flame won't light and there is no audible sound of valve motor opening when the up or down buttons are pressed may mean battery replacement is needed in receiver unit (4 AA). Receiver is mounted under fireplace (do not replace while fireplace is hot)

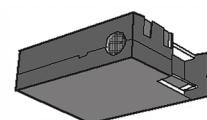

Receiver (inside fireplace)